



SECTION SHOWING METHOD OF REPAIR OF FLEXIBLE BASE PAVEMENT

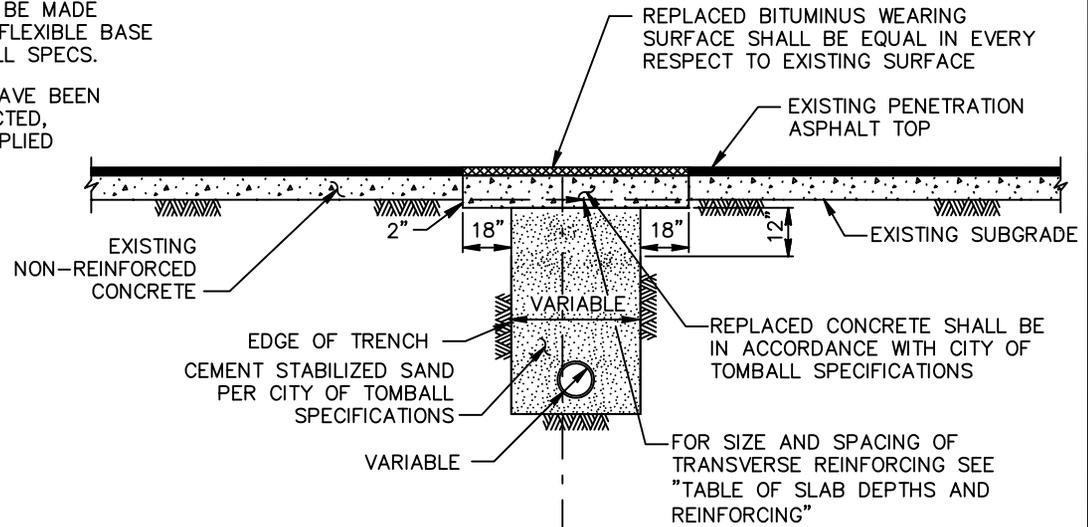

SECTION SHOWING METHOD OF REPAIR OF NON-REINFORCED CONCRETE PAVEMENT

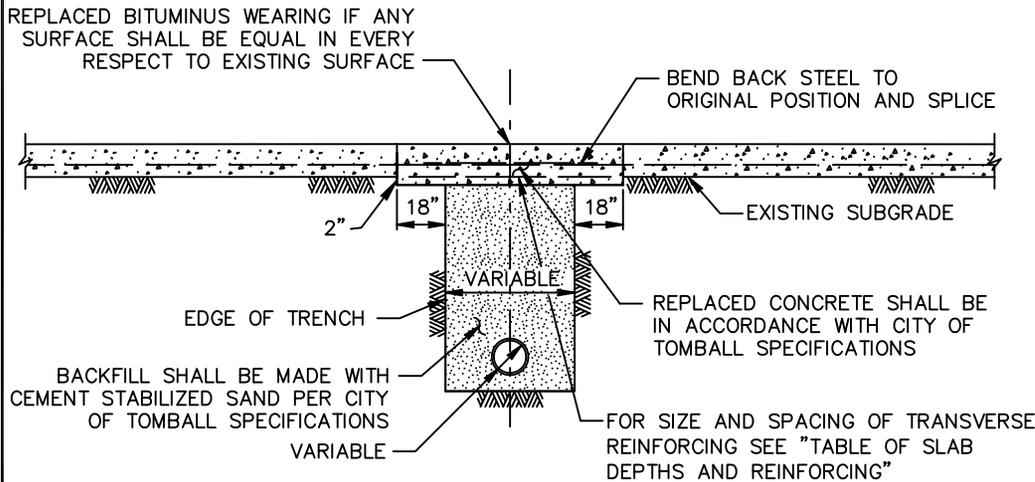

SECTION SHOWING METHOD OF REPAIR OF REINFORCED CONCRETE PAVEMENT

PAVEMENT THICKNESS (INCHES)	BAR SIZE	BAR SPACING (INCHES ON CENTER)
6" AND LESS	#4	24"
8" TO 10"	#5	16"
11" TO 12"	#6	12"

MIN LAP LENGTH = 4D
(D=BAR DIAMETER IN INCHES)

THE ABOVE IS TO BE USED IF NO GEOTECHNICAL RECOMMENDATIONS ARE AVAILABLE

REINFORCING STEEL BAR SIZES AND SPACING

NOT TO SCALE

CITY OF TOMBALL
ENGINEERING & PLANNING DEPARTMENT

PAVEMENT REPAIR

APPROVED BY COT:

ENGINEERING & PLANNING DEPARTMENT
EFFECTIVE JULY 1, 2010